

# KART

Istruzioni di montaggio ed uso  
 Operation instructions  
 Instructions de montage et usage  
 Montage-und Bedienungsanleitung  
 Instrucciones de montaje y uso  
 instrucțiuni pentru montare și utilizare

# IRSAP

creating your comfort

**IRSAP SPA**  
 45031 Arquà Polesine (RO) Italy  
 Tel. +39 0425 466611 - Fax +39 0425 466662  
 Website: <http://www.irsap.com>  
 E-mail: [info@irsap.it](mailto:info@irsap.it)


**IR GROUP SARL**  
 19,Chemin de la Plaine 69390 Vourles (France)  
 Tel. +33 04 28 00 01 67 - Fax +33 04 72 31 86 40  
 Web: <http://www.irsap.com>;  
 E-mail: [irsaprross@irgroup.fr](mailto:irsaprross@irgroup.fr)

**IRSAP-RHOSS Clima Integral, S.L.**  
 Oficina y Almacén: P.I.CAMI RAL  
 Leonardo da Vinci,4 08850 Gavà (Barcelona)  
 Tel. 93 633 47 00 - Fax 93 633 47 04  
 E-mail: [www.informacion@irsap.com](mailto:www.informacion@irsap.com)  
[www.irsap.com](http://www.irsap.com)

**IRROM Industrie S.R.L.**  
 Str. Pricipală 1/A, Sat Fundătara, Iclod 407336,  
 jud. Cluj, România  
 Tel: +40 (0)264 263400 - Fax: +40 (0)264 263404  
 Web: [www.irsap.ro](http://www.irsap.ro)

Accessori non inclusi-Accessoires non compris-  
 Accessoires not included-Zubehör nicht inklusive-Accessorios  
 no incluidos-Acesorii neincluse

Cmax = Coppia massima di serraggio Cmin = Coppia minima di serraggio  
 Cmax = Maximum torque Cmin = Minimum tightening torque  
 Cmax = Couple de serrage Cmin = Couple minimum de serrage  
 Cmax = Max anzugsmoment Cmin = Mindest-Anziehmoment  
 Cmax = Esfuerzo máximo de cierre Cmin = Par de torsión mínimo  
 Cmax = Cuplu de strângere maxim Cmin = Cuplu de strângere minim

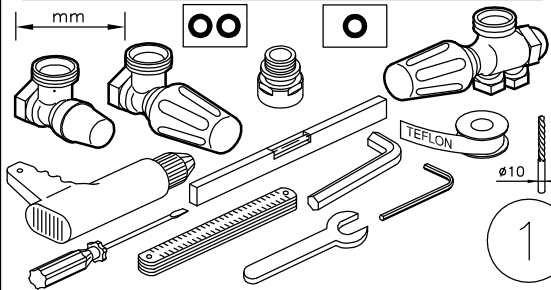

Accessori inclusi-Accessoires compris-  
 Accessories included-Zubehör inklusive-  
 Accesorios incluidos-Acesorii incluse

