


ODDO

IRP00410

Istruzioni di montaggio ed uso
Operation instructions
Instructions de montage et usage
Montage- und Bedienungsanleitung
Instrucciones de montaje y uso
instrucțiuni pentru montare și utilizare

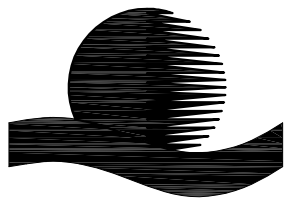

IR SAP
i termoarredatori


IR SAP SPA 45031 Arquà Polesine (RO) Italy
Tel. +39 0425 466611 ; Fax +39 0425 466662
Website: <http://www.irsap.com>; E-mail: info@irsap.it

Numero Verde
800-252246




IR GROUP S.A.S.U. 7,rue du Pont à Lunettes
69390 Vourles (France)
Tel. +33 04 72 31 86 31 ; Fax +33 04 72 31 86 32
Web: <http://www.irsap.com>; E-mail: irsaphross@irgroup.fr

IR SAP-RHOSS Clima Integral, S.L. Oficinas y Almacén:
C./ Leonardo da Vinci, 4 Pol. Ind. Cami Ral
08850 GAVA' (Barcelona)
Telf. +34 93 633 47 00 ; Fax +34 93 633 47 04
Web: <http://www.irsap.com>; E-mail: info@irsap-rhoss.com

Accessori non inclusi-Accessoires non
compris-Accessories not included-Zubehör nicht
inklusive-Accessorios no incluidos-Accessorii neincluse

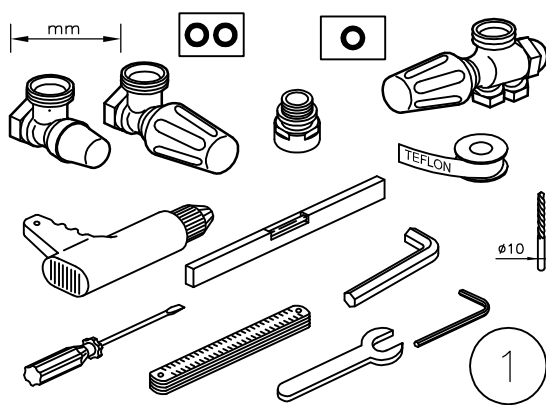

Accessori inclusi-Accessoires
compris-Accessories included-Zubehör
inklusive-Accessorios incluidos-Accessorii incluse

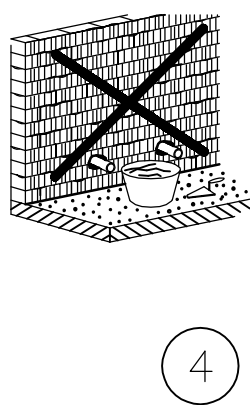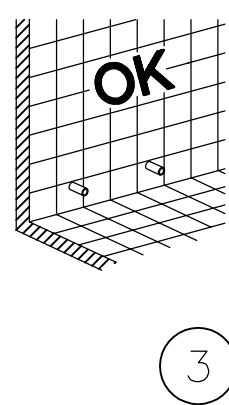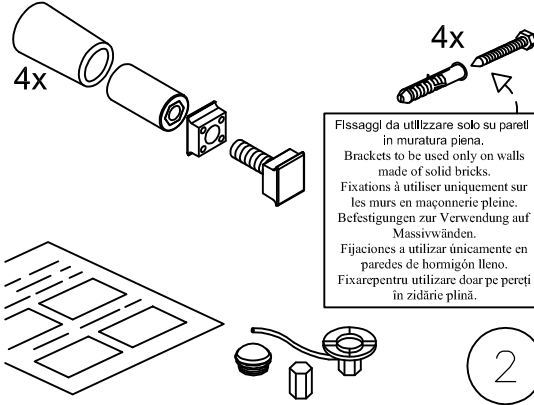

(*) ESEMPIO DI RADIATORE CON ALLACCIAMENTO STANDARD
EJEMPLO DE RADIADOR CON RACCORDEMENT
EJEMPLO DE RADIADOR CON CONEXIÓN STANDARD
EXAMPLE OF RADIATOR WITH STANDARD CONNECTIONS
BEISPIEL EINES HEIZKÖRPER MIT STANDARD-ANSCHLUSS
EXEMPLU DE CALORIFERE CU CONEXIUNE STANDARD

